 




# HEART - Version X QUICK GUIDE

## Touch screen and main icons

Press to confirm or change preheat mode and temperature. Then press START to start it up. It is possible to save the changed settings by pressing "Save new setting"

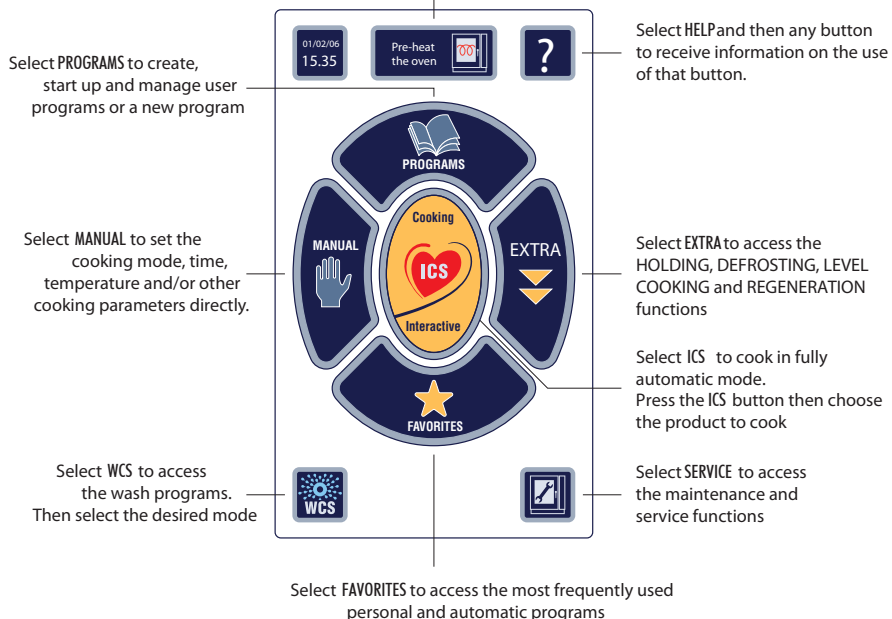

*This section sums up the meaning of some important functions that frequently recur.*



### • TEMPERATURE

Used to adjust the temperature in the oven.



### • TIME

Used to set the cooking time.



### • CORE TEMPERATURE

Used to set the temperature at the core of the food.



### • FAST DRY (in convection mode only)

Used to evacuate the humidity from the oven quickly.



### • AUTOCLIMA

The "AUTOCLIMA" humidity control system makes it possible to keep a constant level of humidity in the oven when cooking by convection or with the combination cycle.



### • CYCLES

Used to add/move between the various cooking cycles



### • PRE-HEAT

Used to set oven pre-heating before starting to cook.



### • START-STOP

START-STOP button: used to start and stop cooking in progress.



### • BACK

BACK button: used to go back to the previous menu/page.



## SETTING MANUAL COOKING

Press the "Manual" button to access the manual cooking setting.



- Select the cooking mode (Convection, Steam or Combination) directly on the touch screen by pressing the icon below the description of the type of cooking.

**NOTE:** The display will show the standard temperature for the selected cooking mode.

- Customize the parameters, selecting the values for the first cooking cycle, by pressing the symbol on the touch screen and turning the knob onto the desired value. Press the knob to confirm it.



- Temperature,




- Time / Core temperature,



- Fast Dry (in convection mode only) / Autoclima,



- Fan speed,

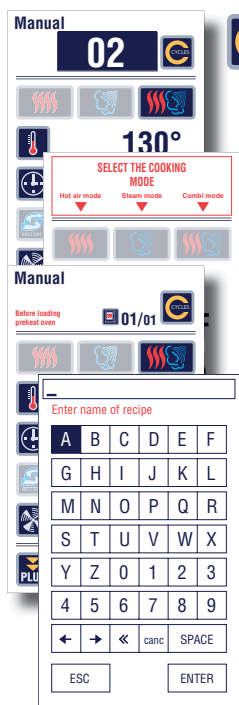

- To add a cooking cycle, press the "Cycles" button on the touch screen, turn the knob until the next cycle number appears and confirm by pressing the knob.

**NOTE:** It is possible to set a maximum of 15 cooking cycles.

- Select the type of cooking for the new cycle directly on the touch screen, change the relevant parameters as for the previous cycle. Add new cycles if necessary until the program is completed.



- On completion of the program, preheat the oven by pressing the "Preheat" button or, if the oven is already preheated, put in the food and press the "START/STOP" button.

Once the oven is preheated, the oven holds the temperature and the pre-set conditions.

After setting a program, or at the end of cooking, it is possible to save the recipe made.



- Select the "Save" button, key in the name of the new recipe and confirm with ENTER, to save it in the user programs.

The recipe will be saved in the user Programs.



## SETTING INTERACTIVE COOKING

Press the “Interactive Cooking ICS” button to start cooking immediately starting with default settings.



- Select the type of food directly on the touch screen or turn the knob onto the relevant food and then confirm by pressing the knob.

- Select the desired recipe directly on the touch screen or turn the knob to move onto the relevant recipe and then confirm by pressing the knob.

*Depending on the selected ICS cooking, parameters are automatically suggested that can be customized according to need:*



### • BROWNING

Customize browning by selecting the “Temperature” icon or the value directly on the touch screen and turning the knob onto the desired value, confirming by pressing the knob.



### • COOKING

Customize the cooking by selecting the “Time”/“Core Probe” icon or by selecting the value directly on the touch screen and turning the knob onto the desired value, confirming by pressing the knob.



### • DEGREE OF HUMIDITY

Customize the degree of humidity by selecting the “Autoclima” icon or by selecting the value directly on the touch screen and turning the knob onto the desired value, confirming by pressing the knob.




- Preheat the oven by pressing the “Preheat” button or, if the oven is already preheated, put in the food and press the “START/STOP” button.

*Once the oven is preheated, the oven holds the temperature and the pre-set conditions.*

## CUSTOMIZING COOKING CYCLES

*In the cooking cycle in progress the parameters are displayed in real time, pressing on the icons or on the corresponding values will show the settings.*

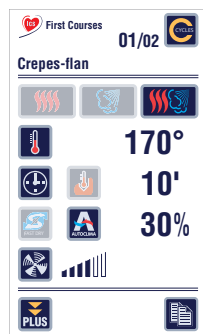

- During cooking it is possible to customize the parameters related to



- Temperature,



- Time / Core temperature,



- Fast Dry (in convection mode only) / Autoclima,




- Fan speed,

for each program cycle, by simply pressing the related symbol on the touch screen and turning the knob onto the desired value, confirming by pressing the knob.



## CALLING UP USER PROGRAMS

Press the "Program" button to access the "User Program" / "New Program" selection mask.

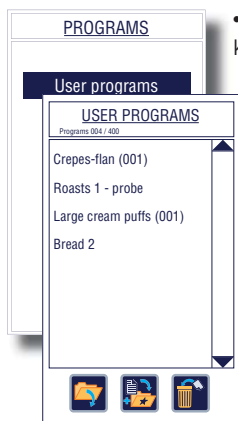

- Select "User Programs" by pressing on the display or confirming by pressing the knob to call up a previously saved program.



- Select the program directly on the touch screen or turn the knob to move onto the desired program, press the "Open" button or confirm by pressing the knob.



- Preheat the oven by pressing the "Preheat" button or, if the oven is already preheated, put in the food and press the "START/STOP" button.

Once the oven is preheated, the oven holds the temperature and the pre-set conditions.

## ADDING A PROGRAM TO FAVORITES



- After selecting a program it is possible to add it to the list of favorites by pressing the "Add to Favorites" button.

## DELETING A USER PROGRAM



- Select the desired program directly on the touch screen or turn the knob to move onto the desired program, and press the "Delete" button.

A window appears in which you are asked to confirm deletion of the recipe.

Confirm deletion by pressing "YES".



## CALLING UP FAVORITE RECIPES

Press the "Favorites" button to access the selection mask for favorite recipes.



- Select the recipe directly on the touch screen and press the "Open" button or turn the knob to move onto the relevant recipe and then confirm by pressing the knob.



- Customize the cooking, if desired, selecting the parameters directly on the touch screen and turning the knob onto the desired value, confirming by pressing the knob.



- Preheat the oven by pressing the "Preheat" button or, if the oven is already preheated, put in the food and press the "START/STOP" button.

Once the oven is preheated, the oven holds the temperature and the pre-set conditions.

**NOTE:** It is possible to inhibit all the functions of the main menu except for "Favorites", "Wash" and "Preheating the Oven".

See the User's Manual - Page 72.



## SETTING AN EXTRA MODE

Press the “EXTRA” button to access setting the extra functions such as: Regeneration, Holding, Defrosting, Multi-level.

• Select the type of operation you want to perform directly on the touch screen or turn the knob onto the relevant operation and confirm by pressing the knob.



### • REGENERATION

This function makes it possible to heat up food cooked beforehand, providing the right mix of temperature and humidity.

### • HOLDING

This function makes it possible to keep food hot when cooking has just ended, allowing the operator to serve the food “perfectly hot” during the time of service.


### • DEFROSTING

This function makes it possible to defrost food quickly, with the possibility of monitoring the temperature at the core of the food as well.

• Depending on the type of selected Extra, parameters are automatically suggested that can be customized according to need. Customize the parameters by selecting the values directly on the touch screen and turning the knob onto the desired values, confirming by pressing the knob.



• Preheat the oven, where necessary, by pressing the “Preheat” button or put the food in the oven and press the “START/STOP” button.

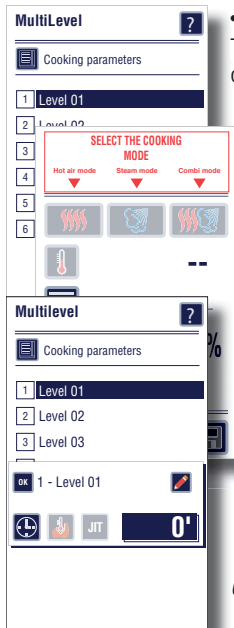

### • MULTI-LEVEL

This function is used to cook by setting different times for the various levels and enables obtaining different cooking at the same time with the “JIT - Just in Time” option.



• Select the “cooking parameters” icon to customize the mode and the cooking settings by selecting the values directly on the touch screen and turning the knob to obtain the desired values, confirming by pressing the knob.

• Select the levels you want to customize directly on the touch screen. Customize the parameters of time, core temperature or JIT, selecting the values directly on the touch screen and turning the knob onto the desired values, confirming by pressing the knob.



• Preheat the oven by pressing the “Preheat” button or, if the oven is already preheated, put in the food and press the “START/STOP” button.

Once the oven is preheated, the oven holds the temperature and the pre-set conditions.



## OVEN WASHING

Press the "WCS" button to access the selection mask for the type of oven washing.



The oven is equipped with 3 wash programs:

- **MANUAL:** Simple procedure used to clean thoroughly and quickly with minimum inconvenience to the operator. - Duration 10 minutes.

**With OPTIONAL Automatic Wash Kit:**

- **SOFT:** Wash procedure designed to remove daily dirt without the operator taking any direct action in the cleaning operations. - Duration 24 minutes.

- **HARD:** Wash procedure designed to remove tough dirt without the operator taking any direct action in the cleaning operations. - Duration 38 minutes.



• Select the type of wash to be carried out directly on the Touch Screen or turn the knob onto the relevant type of wash and then confirm by pressing the knob.



• Press the "START/STOP" button to start the manual wash procedure.

• The display will show "COOLING" if the oven temperature is high or "WAIT" if the oven temperature is low.

The oven will go to the ideal temperature for washing.

• If you have chosen manual washing the display will show "SPRAY WITH CUBE CLEAN", open the door and spray the detergent inside the oven.

• If you have chosen the soft/hard wash the display will show "INSERT ARM", open the door and put the wash arm into its seat, making sure it is firmly secured. In addition, make sure that the tube with the detergent tank is connected.



Close the door and press the "START/STOP" button to restart washing.

• The oven will proceed with the following cycles, the display will show the time remaining to the end of washing.

• At the end of the wash cycle the display will show a window stating that the procedure is over. Press "ESC" directly on the Touch Screen or confirm by pressing the knob to remove the window.

• For manual washing, rinse the oven thoroughly.

• For automatic washing, remove the wash arm.

**PIPER PRODUCTS**

**SERVOLIFT EASTERN**

BUILT TO LAST

300 S. 84th Avenue • Wausau, WI 54401  
Phone: 800-544-3057 • Fax: 715-842-3125  
www.piperonline.net

**FoodSafe™**